


SCAG[®]

POWER EQUIPMENT

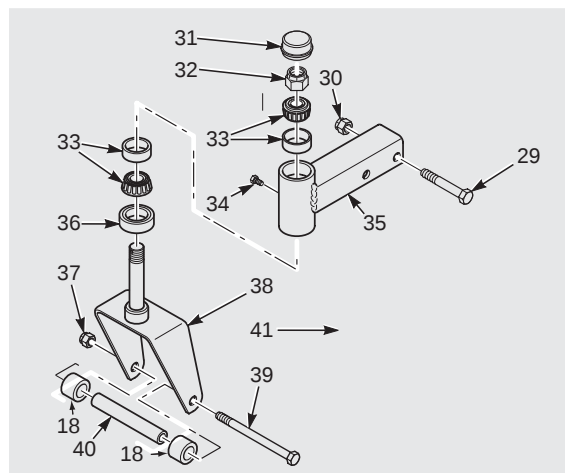

MODEL SZC

ILLUSTRATED PARTS LIST

This manual covers the illustrated parts list for:

SZC36A-17KA	with a serial number of A420001 to A429999
SZC36A-19KA	with a serial number of A980001 to A989999
SZC42A-19KA	with a serial number of A440001 to A449999
SMZC-36A	with a serial number of A460001 to A469999
SMZC-42A	with a serial number of A470001 to A479999


NOTES



ILLUSTRATED PARTS LIST TABLE OF CONTENTS

SUBJECT	PAGE
SZWC36A, 42A Cutter Deck	2-3
Cutter Deck Controls	4-5
Sheet Metal Components	6-7
SZC Roll Over Protection System	8-9
Drive System Components	10-11
Engine and Attaching Parts - Kohler	12-13
Steering Components	14-15
Brake Components	16-17
Fuel and Hydraulic System	18-19
Electrical System	20-21
Hydraulic Pump (BDP-10A)	22-23
Replacement Decals	24-25
Electrical Schematic	26

36A" & 42A" CUTTER DECKS

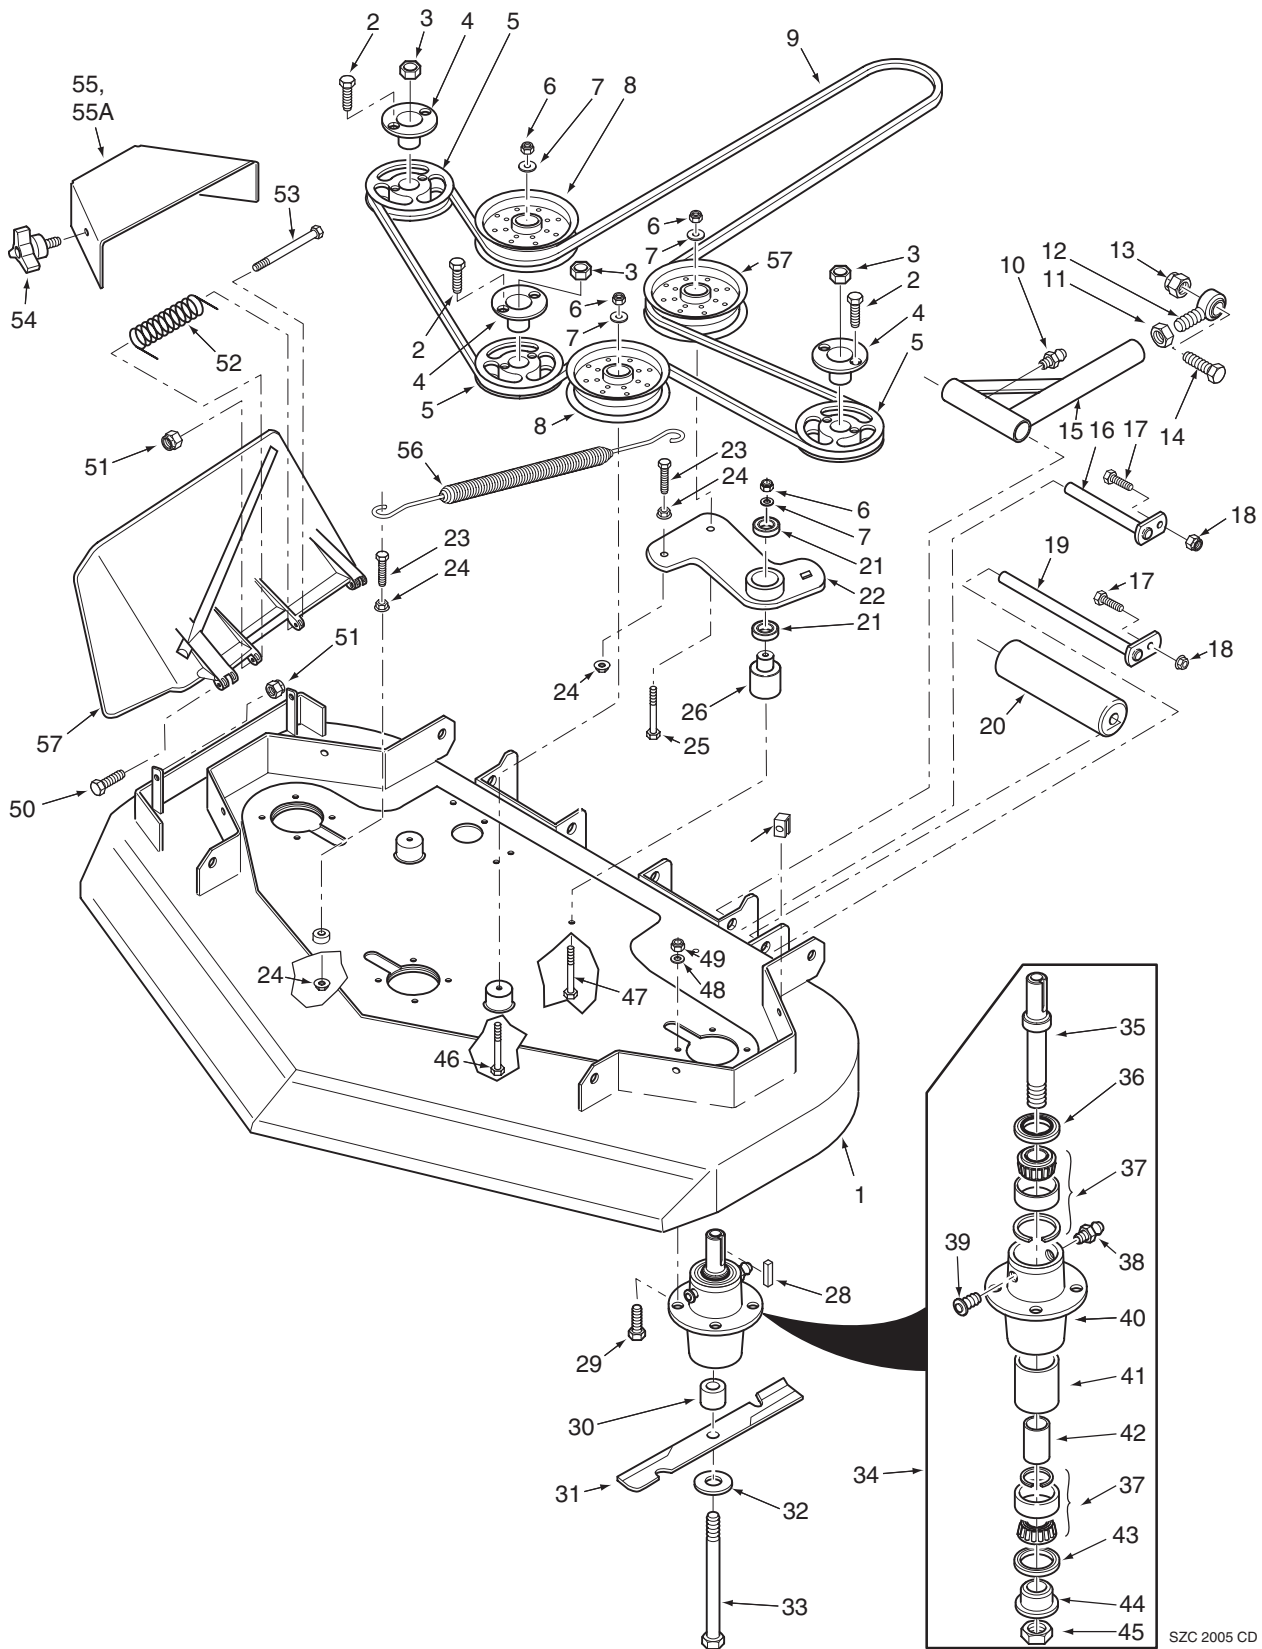


SZC 2005 CD

36A" & 42A" CUTTER DECKS

Ref. Part No. No.	Description	36 42	Ref. Part No. No.	Description	36 42
1 461833	Cutter Deck (incl. decals)	x	43589	Shaft, Cutter Spindle	x
461834	Cutter Deck (incl. decals)	x	36 481024	Seal, Top	x x
2 04015-14	Bolt, Hex Head 1/4-20 x 3/4"	x	37 481022	Bearing Assembly	x x
04001-172	Bolt, Hex Head 1/4-20 x 1"	x	38 48114-04	Grease Fitting	x x
3 04020-09	Nut, 5/8-11	x x	39 48677	Relief Fitting, Tapered Spindle	x x
4 48926	Tapered Hub, 1.125" Bore	x x	40 43644	Spindle Housing	x x
5 483110	Pulley, 4.15 O.D. (36")	x	41 43312	Spacer, Outside	x x
482646	Pulley, 4.75 O.D. (42")	x	42 43296	Spacer, Inside	x x
6 04021-09	Nut, Elastic Stop 3/8-16	x	43 481025	Seal, Bottom	x x
7 04043-04	Flatwasher, 3/8-.391 x .938 x .105	x x	44 43297	Spindle Bushing, Bottom	x x
8 482416	Pulley, 5" Idler	x x	45 481035	Nut, Special 1 - 1/16-18	x x
9 483001	Belt, Cutter Deck (36")	x	46 04001-23	Bolt, 3/8-16 x 4-1/2"	x x
483002	Belt, Cutter Deck (42")	x	47 04001-77	Bolt, 3/8-16 x 3-1/2"	x x
10 48114-04	Grease Fitting 1/4-28 Self Tapping	x x	48 04030-03	Lock washer, 5/16"	x x
11 04020-08	Nut, 1/2-20 UNF	x x	49 04021-22	Nut, Elastic Stop 5/16-18 Gr. 8	x x
12 48542	Rod End, 1/2-20 RH Thread	x x	50 04001-11	Bolt, 5/16-18 x 1-1/2"	x x
13 04021-07	Nut, Elastic Stop 1/2-13	x x	04001-12	Bolt, 5/16-18 x 1-3/4"	x x
14 04001-87	Bolt, Hex Head 1/2-13 x 4"	x x	51 04021-10	Nut, Elastic Stop 5/16-18	x x
15 461769	Push Arm Assembly (incl. 10, 11, 12)	x x	52 482245	Spring, Discharge Chute	x x
16 451240	Rod Weldment, Push Arm	x x	53 04001-154	Bolt, Hex Head 5/16-18 x 4-3/4"	x x
17 04001-09	Bolt, Hex Head 5/16-18 x 1"	x x	54 481625-01	Knob w/stud, 3/8-16 x 1-1/4"	x x
18 04019-03	Nut, Serrated Flange 5/16-18	x x	55 424055	Belt Cover	x
19 45944	Shaft Weldment, Guide Roller	x x	56 483112	Spring	x x
20 48038	Roller	x x	57 482783	Pulley, 5" Idler	x x
21 48224	Bearing	x x	58 461295	Discharge Chute	x x
22 461632	Idler Arm Assembly (incl. item 21)	x x			
23 04001-136	Bolt, Hex Head 3/8-16 x 1-1/2" Gr. 8	x x			
24 04019-04	Nut, Serrated Flange 3/8-16	x x			
25 04001-54	Bolt, Hex Head 3/8-16 x 3"	x x			
26 43660	Pivot, Idler	x x			
27 04110-03	U-Nut, 3/8-16	x x			
28 04063-20	Key, 1/4 x 1/4 x 1"	x x			
29 04001-176	Bolt, 5/16-18 x 1-3/4" Gr. 8	x x			
30 43590	Spacer, Spindle	x x			
31 482959	Cutter Blade, 12.20"	x			
483014	Cutter Blade, 14-3/4"	x			
32 04043-06	Flatwasher, 5/8-.688 x .75 x .134 HD	x x			
33 04001-180	Bolt, Hex Head 5/8-11 x 8-1/2"	x			
04001-41	Bolt, Hex Head 5/8-11 x 9-1/2"	x			
34 461776	Spindle Assembly (36")	x			
461663	Spindle Assembly	x			
35 43663	Shaft, Cutter Spindle (36")	x			


CUTTER DECK CONTROLS

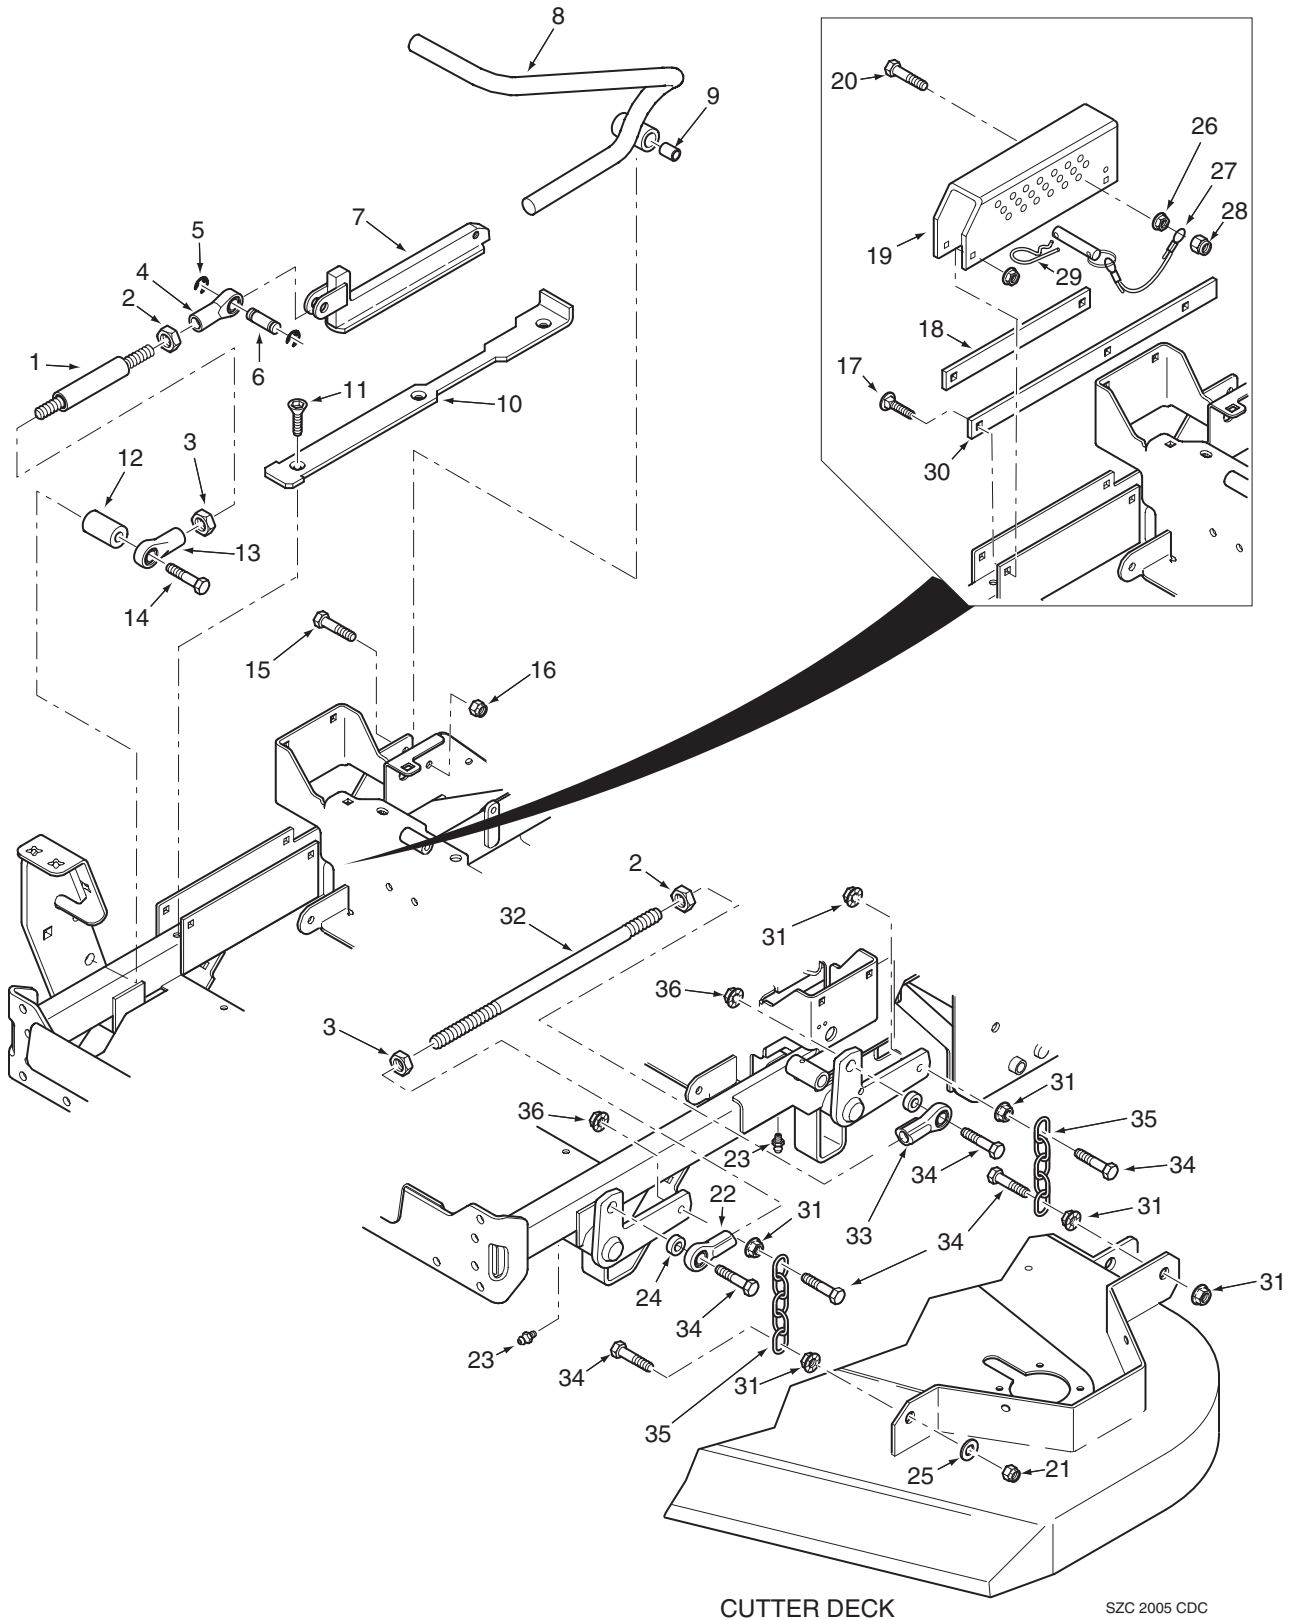

CUTTER DECK CONTROLS

Ref. No.	Part No.	Description
1	483136	Link, Deck Lift
2	04020-28	Nut, 1/2-20 UNF LH Thread Jam
3	04020-27	Nut, 1/2-20 UNF RH Jam
4	483134	Rod End, 1/2-20 LH Female
5	04050-10	Ring, Retaining 1/2" External "E"
6	43487	Pin, Deck Lift
7	483062	Slide, Deck Height Adjust
8	451703	Deck Latch Weldment
9	43668	Bushing, .502 O.D.
10	422346	Lock Plate, Deck Lift
11	04014-03	Screw, Cap 5/16-18 x 3" FHHS
12	43666	Spacer, Foot Pedal SZC
13	483135	Rod End, 1/2-20 RH Female
14	04001-145	Bolt, Hex Head 1/2-13 x 3-1/2"
15	04001-31	Bolt, Hex Head 3/8-16 x 2-1/2"
16	04021-09	Nut, Elastic Stop 3/8-16
17	04003-04	Bolt, Carriage 5/16-18 x 1"
18	422381	Guide, Short
19	423463	Bracket, Cutting Height Adjustment
20	04001-77	Bolt, Hex Head 3/8-16 x 3-1/2"
21	04021-09	Nut, Elastic Stop 3/8-16
22	483130	Rod End, 1/2-20 RH Female
23	48114-04	Grease Fitting, 1/4-28 Self Tap
24	43432	Spacer
25	04041-07	Flatwasher, 3/8-.391 x .938 x .105
26	04019-04	Nut, Serr. Flange 3/8-16
27	04067-09	Pin
	481547	Lanyard
28	04021-09	Nut, Elastic Stop 3/8-16
29	04062-04	Hair Pin Cotter, .177 x 3-1/4"
30	422380	Guide, Long
31	04019-04	Nut, Serr. Flange 3/8-16
32	483132	Link, Lift 1/2-20 x 14.18"
33	483131	Rod End, 1/2-20 LH Female
34	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
35	48540	Chain
36	04021-23	Nut, Center Lock 5/8-11

SHEET METAL COMPONENTS

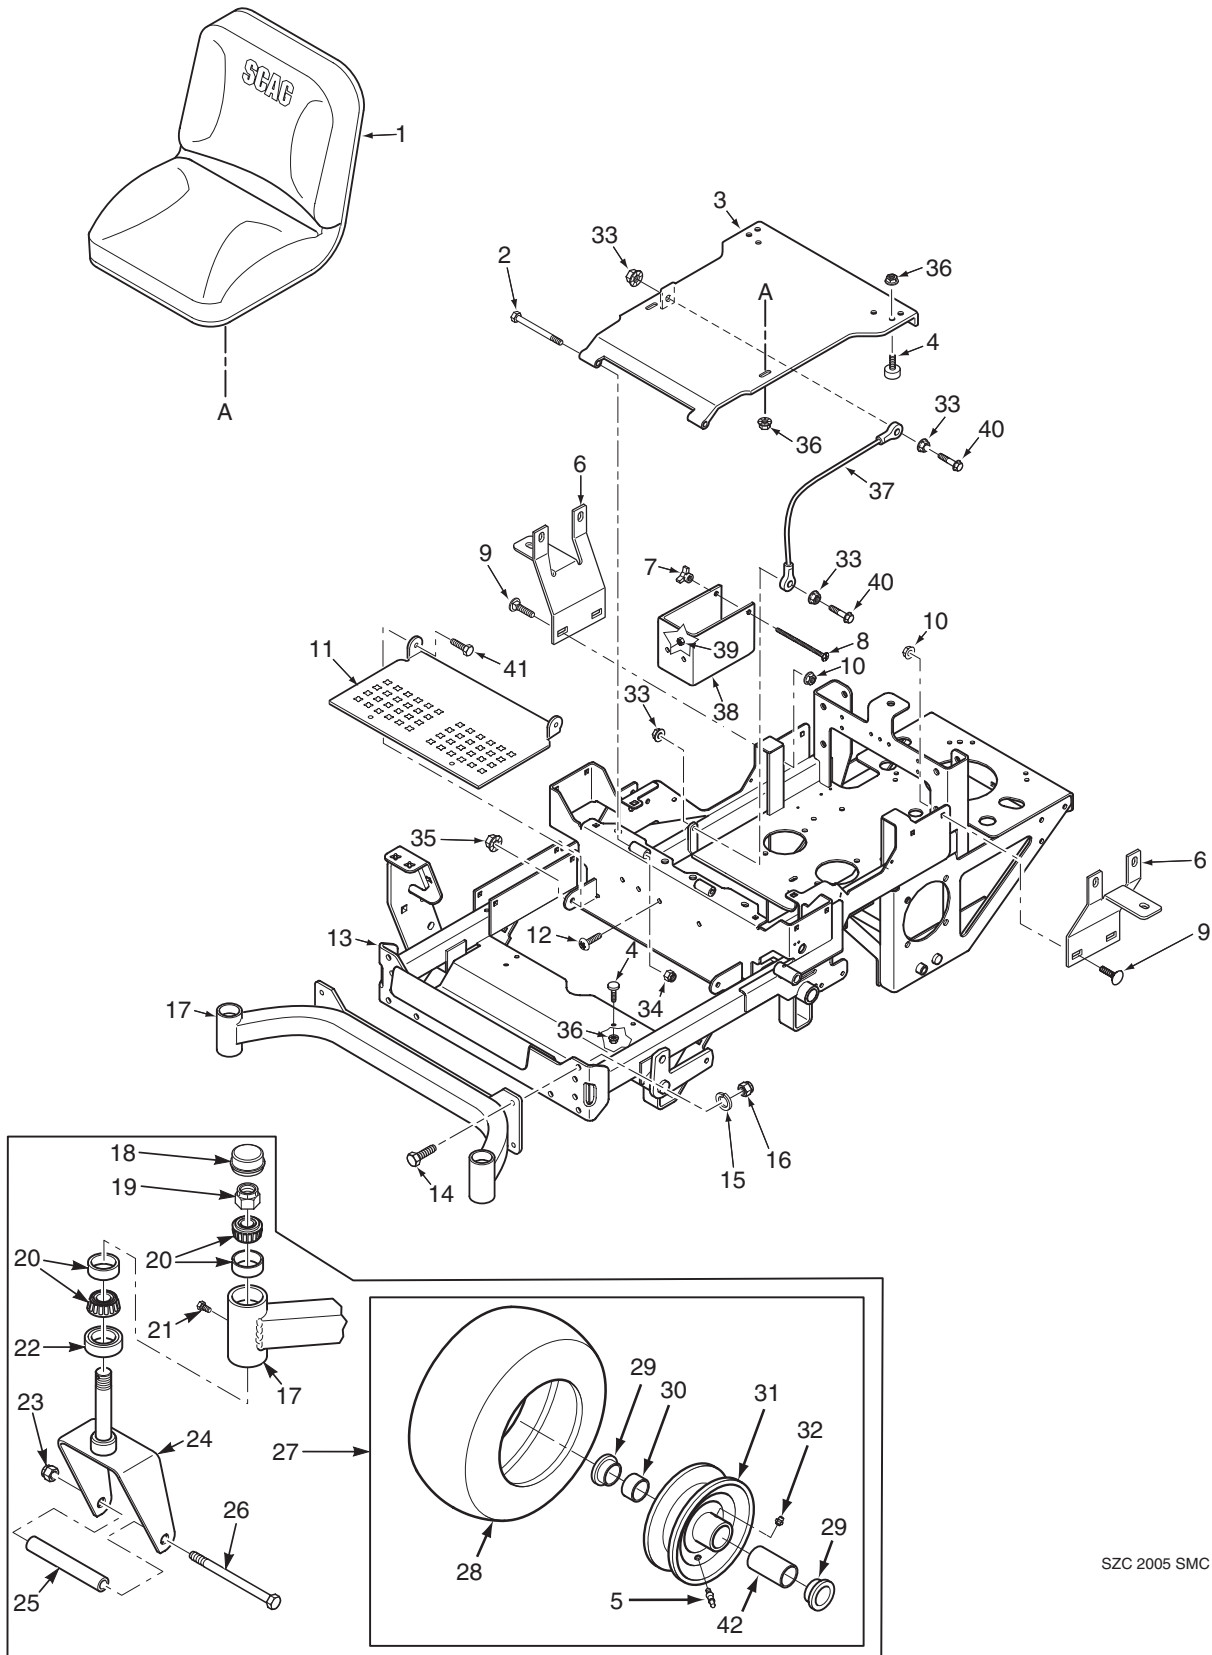


SZC 2005 SMC

SHEET METAL COMPONENTS

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	483116	Seat Assembly	31	481844	Wheel, 5" x 3.25"
2	04001-51	Bolt, Hex Head 3/8-16 x 3-3/4"	32	48114-05	Grease Fitting, 1/4-28 Straight
3	451732	Seat Mounting Base Weldment	33	04019-02	Nut, Serr. Flange 1/4-20
4	481284	Bumper, Rubber	34	04021-10	Nut, Elastic Stop 5/16-18
5	**	Tire Valve, Purchase Locally	35	04021-09	Nut, Elastic Stop 3/8-16
6	424200	Bracket, Fuel Tank Mounting	36	04019-03	Nut, Serr. Flange 5/16-18
7	04029-01	Wing Nut, 1/4-20	37	48566	Cable, Seat Stop
8	04003-39	Bolt, Carriage 1/4-20 x 6"	38	424058	Battery Box
9	04003-12	Bolt, Carriage 5/16-18 x 3/4"	39	04019-04	Nut, Serr. Flange 3/8-16
10	04019-03	Nut, Serr. Flange 5/16-18	40	04001-59	Bolt, Hex Head 1/4-20 x 1-1/4"
11	423557	Foot Plate	41	04001-19	Bolt, Hex Head 3/8-16 x 1"
12	04104-01	Bolt, Torx 3/8-16 x 1"	42	481769	Roller Bearing, .625 x 3-1/4"
13	451673	Mainframe Weldment			
14	04001-28	Bolt, Hex Head 7/16-14 x 1-1/4"			
15	04030-05	Lockwasher, 7/16"			
16	04021-11	Nut, Elastic Stop 7/16-14			
17	451728	Caster Support Weldment - 36"			
	451729	Caster Support Weldment - 42"			
18	481559	Cap, Grease			
19	04021-20	Nut, Elastic Stop 1"-14 Jam			
20	48668	Bearing w/Race			
21	482028-01	Plug, 1/4-28 Self Tap			
22	481025	Seal, 2" O.D. x 1.625 I.D.			
23	04021-07	Nut, Elastic Stop 1/2-13			
24	451727	Caster Yoke Weldment			
25	43511	Sleeve, Caster Wheel			
26	04001-80	Bolt, Hex Head 1/2-13 x 6-1/2"			
27	481843	Caster Wheel Assy. (incl. 28, 29, 30, 31, 32)			
28	481845	Tire, 11" x 4"-5			
29	481770	Retainer, .625 x 1.375			
30	481846	Roller Bearing, .625 x 1"			

SZC ROLL OVER PROTECTION SYSTEM

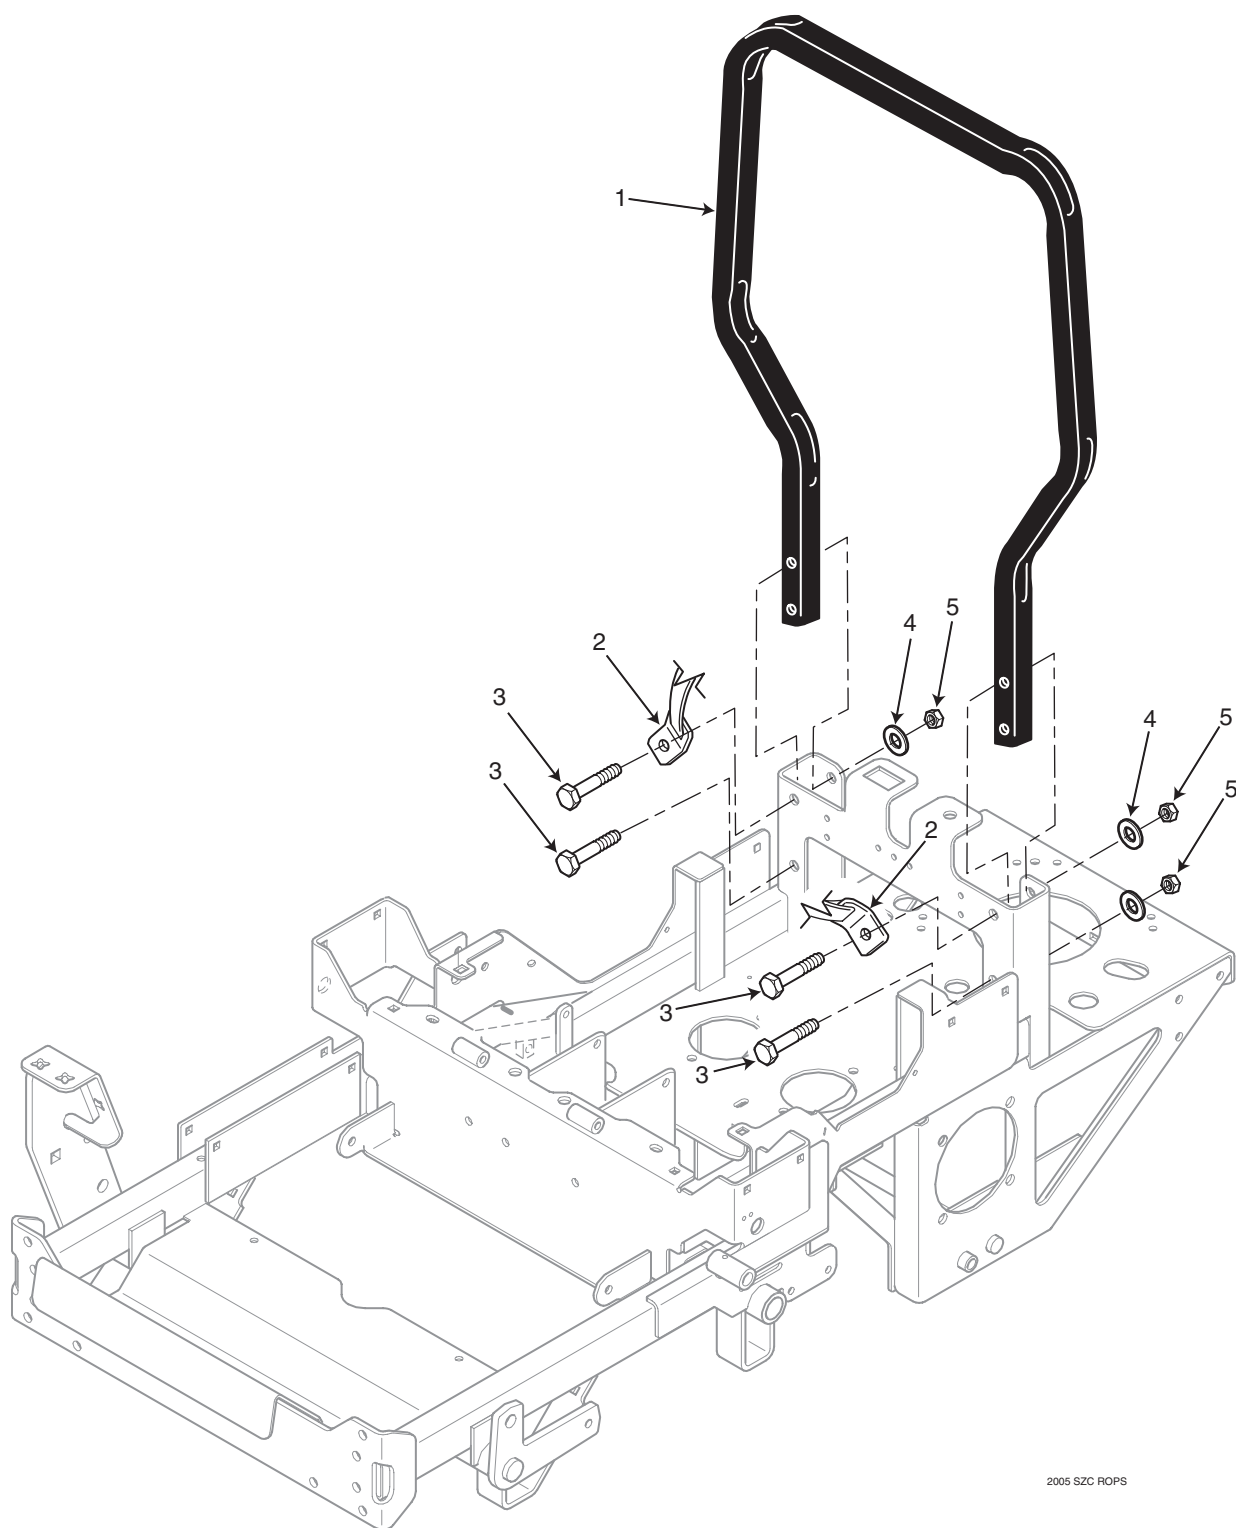


2005 SZC ROPS

SZC ROLL OVER PROTECTION SYSTEM

Ref. No.	Part No.	Description
1	483140	SZC ROPS
2	483150	Seat Belt, ROPS
3	04001-145	Bolt, Hex Head 1/2-13 x 3-1/2"
4	04040-13	Flatwasher, 1/2-.562 x 1.375 x .109
5	04021-19	Nut, Center Lock 1/2-13


DRIVE SYSTEM COMPONENTS

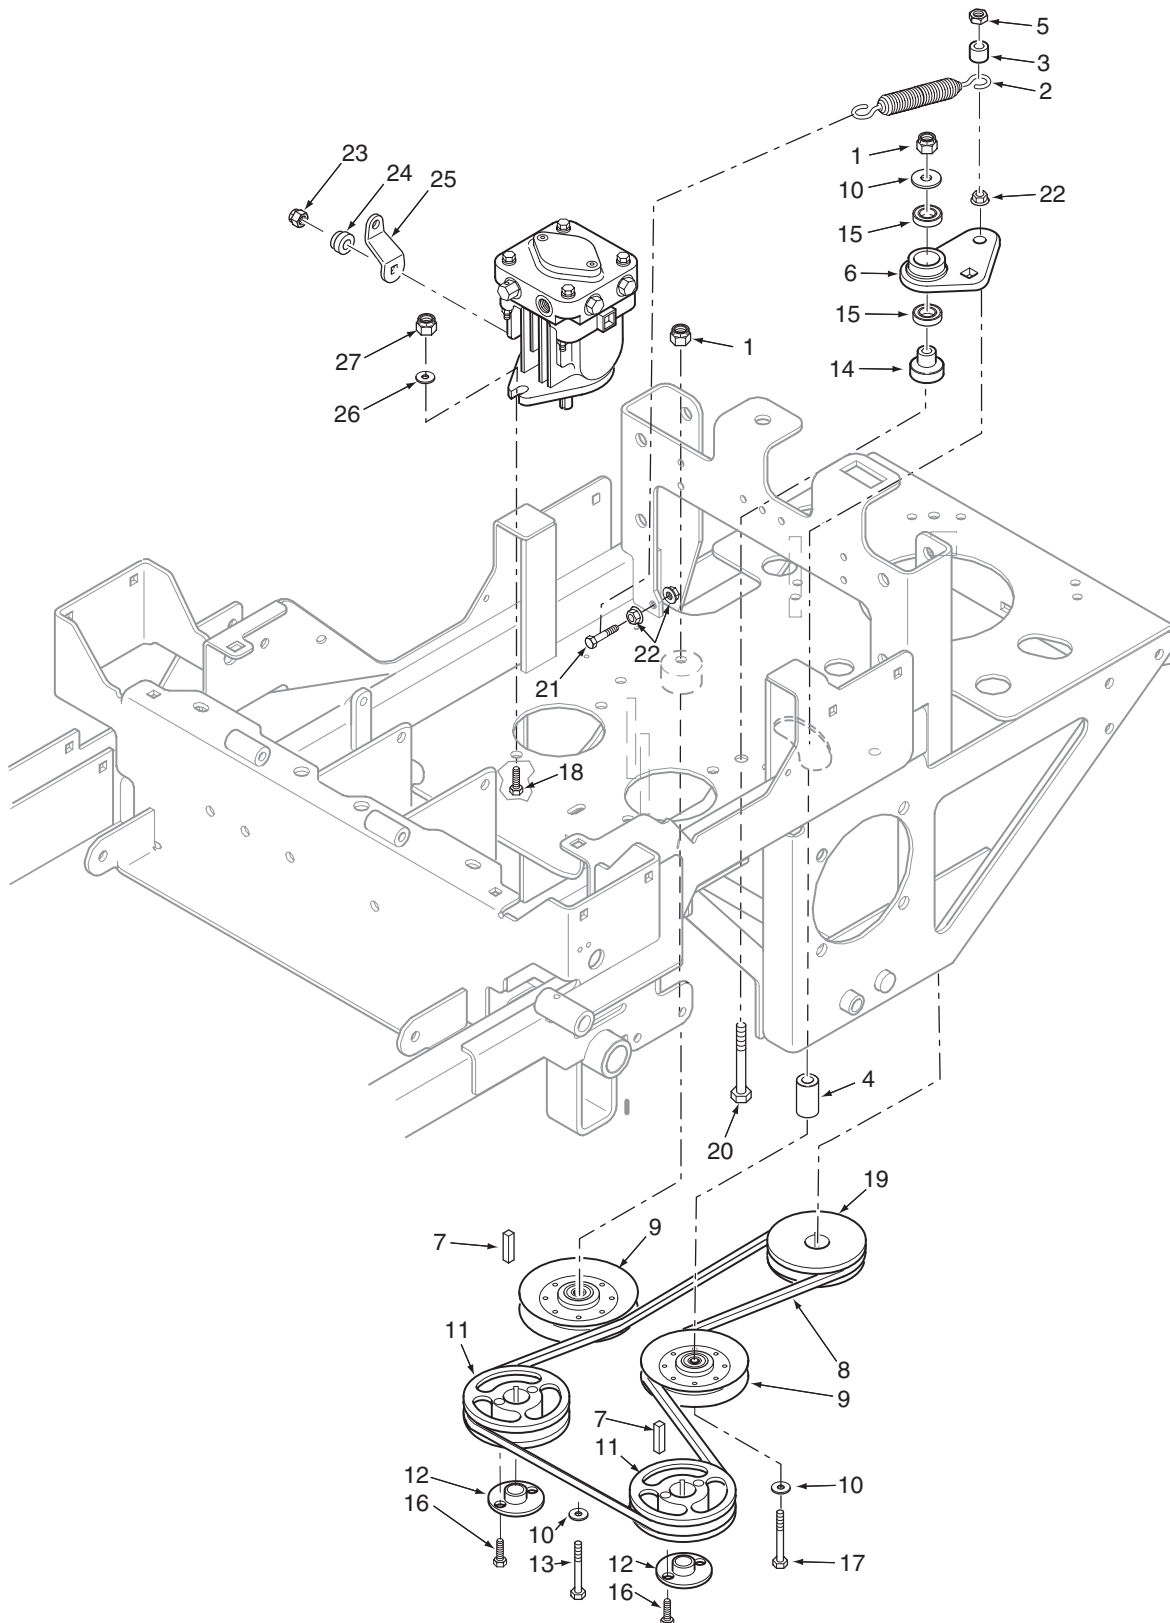

DRIVE SYSTEM COMPONENTS

Ref. Part No. No.	Description
1 04021-09	Nut, Elastic Stop 3/8-16
2 483088	Spring, SZC Pump Drive
3 43212	Sleeve
4 43674	Spacer, Pump Idler
5 04021-05	Nut, Center Lock 3/8-16
6 49922	Idler Arm Assembly, Pump Drive
7 04063-14	Key, 5 x 5 x 25mm
8 483164	Belt, Pump Drive SZC
9 481048	Pulley, Idler 3" Dia.
10 04043-04	Flatwasher, 3/8-.391 x .938 x .105 HD
11 482649	Pulley, 5.45 O.D. Tapered Bore
12 482085	Hub, Tapered, 15mm Bore
13 04001-45	Bolt, Hex Head 3/8-16 x 2"
14 43503	Pivot, Idler Short
15 48224	Bearing
16 04001-172	Bolt, Hex Head 1/4-20 x 1" Grade 8 Black
17 04001-62	Bolt, Hex Head 3/8-16 x 3-1/4"
18 04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
19 482968	Pulley, 5.45" Dia. 1" Bore
20 04001-31	Bolt, Hex Head 3/8-16 x 2-1/2"
21 04001-136	Bolt, Hex Head 3/8-16 x 1-1/4 Grade 8 Black
22 04019-04	Nut, Serr. Flange 3/8-16
23 04021-12	Nut, Center Lock 5/16-24
24 483123	Retainer, Pump Lever
25 424061	Control Lever, Pump
26 04043-04	Flatwasher, 3/8-.391 x .938 x .105
27 04021-09	Nut, Elastic Stop 3/8-16

ENGINE AND ATTACHING PARTS

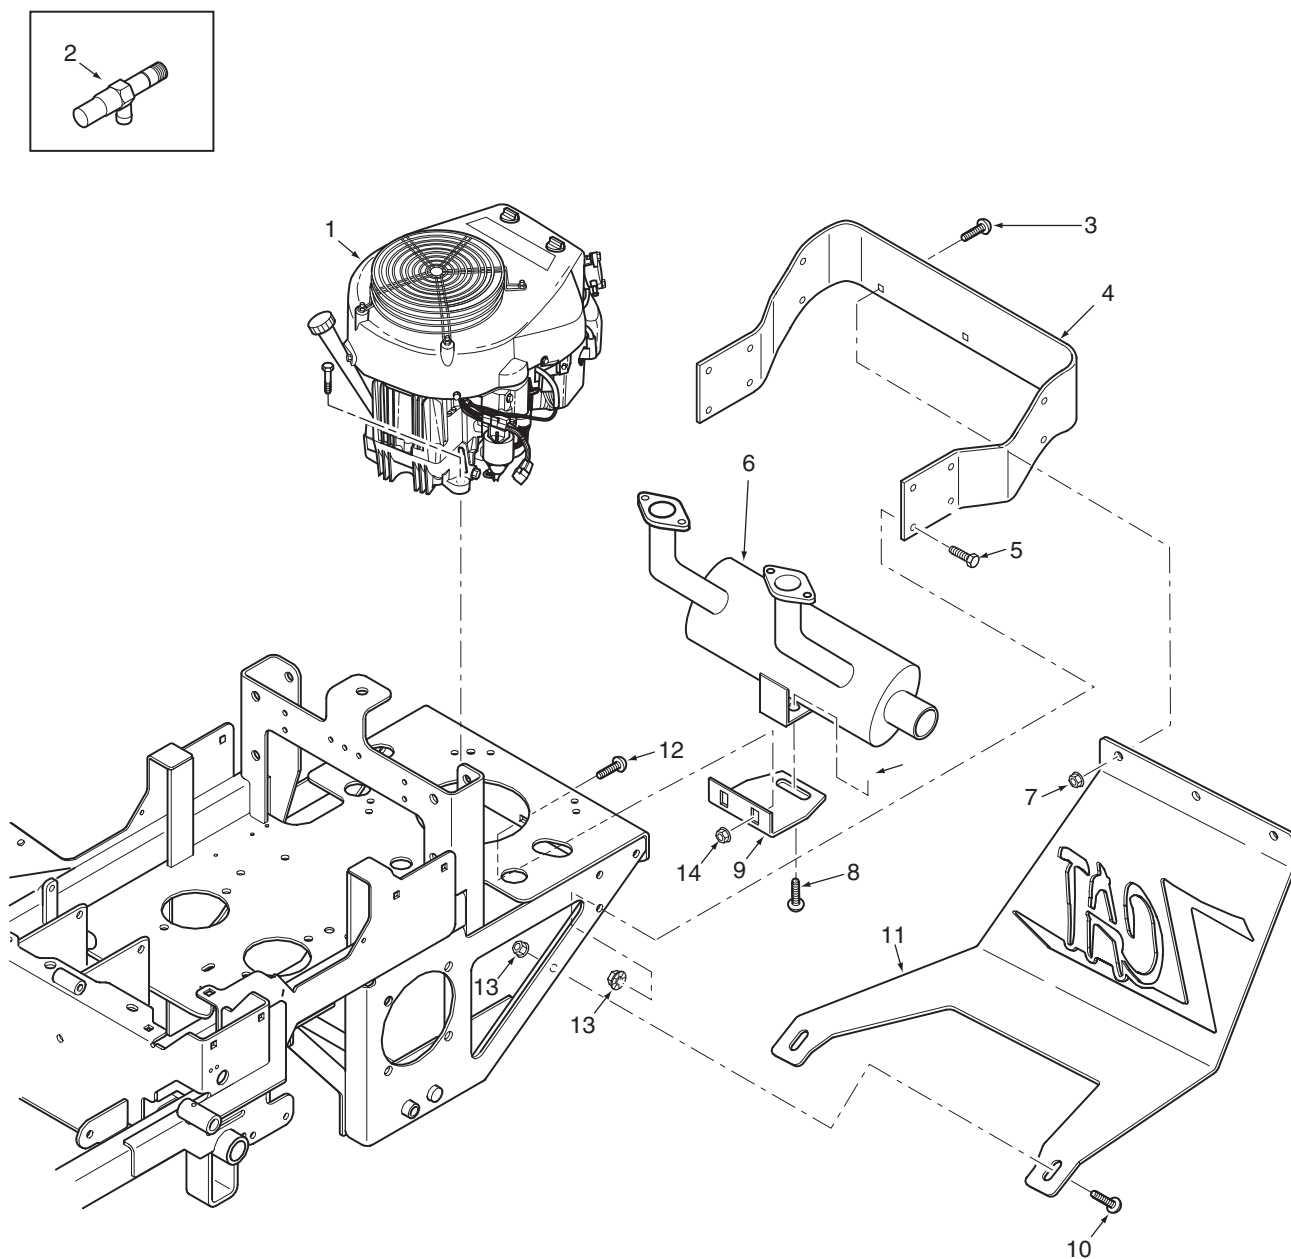


SZC 2005 EAPKA

ENGINE AND ATTACHING PARTS

Ref. No.	Part No.	Description
1	482931	Engine, Kawasaki 17hp (FH541V-AS36)
	483024	Engine, Kawasaki 19hp (FH580V-AS33)
2	482349	Extension, Oil Drain 4"
3	04104-01	Bolt, Torx 3/8-16 x 1"
4	424014	Bumper, Rear
5	04001-19	Bolt, Hex Head 3/8-16 x 1"
6	483102	Muffler, SZC Kawasaki
7	04019-04	Nut, Serr. Flange 3/8-16
8	04011-12	Bolt, 5/16-18 x 3/4" Self Tap
9	424133	Mounting Bracket, Muffler
10	04104-01	Bolt, Torx 3/8-16 x 1"
11	424072	Skidplate
12	04003-12	Bolt, Carriage 5/16-18 x 3/4"
13	04019-04	Nut, Elastic Stop 3/8-16
14	04019-03	Nut, Elastic Stop 5/16-18
15	04003-12	Bolt, Carriage 5/16-18 x 3/4"


STEERING COMPONENTS

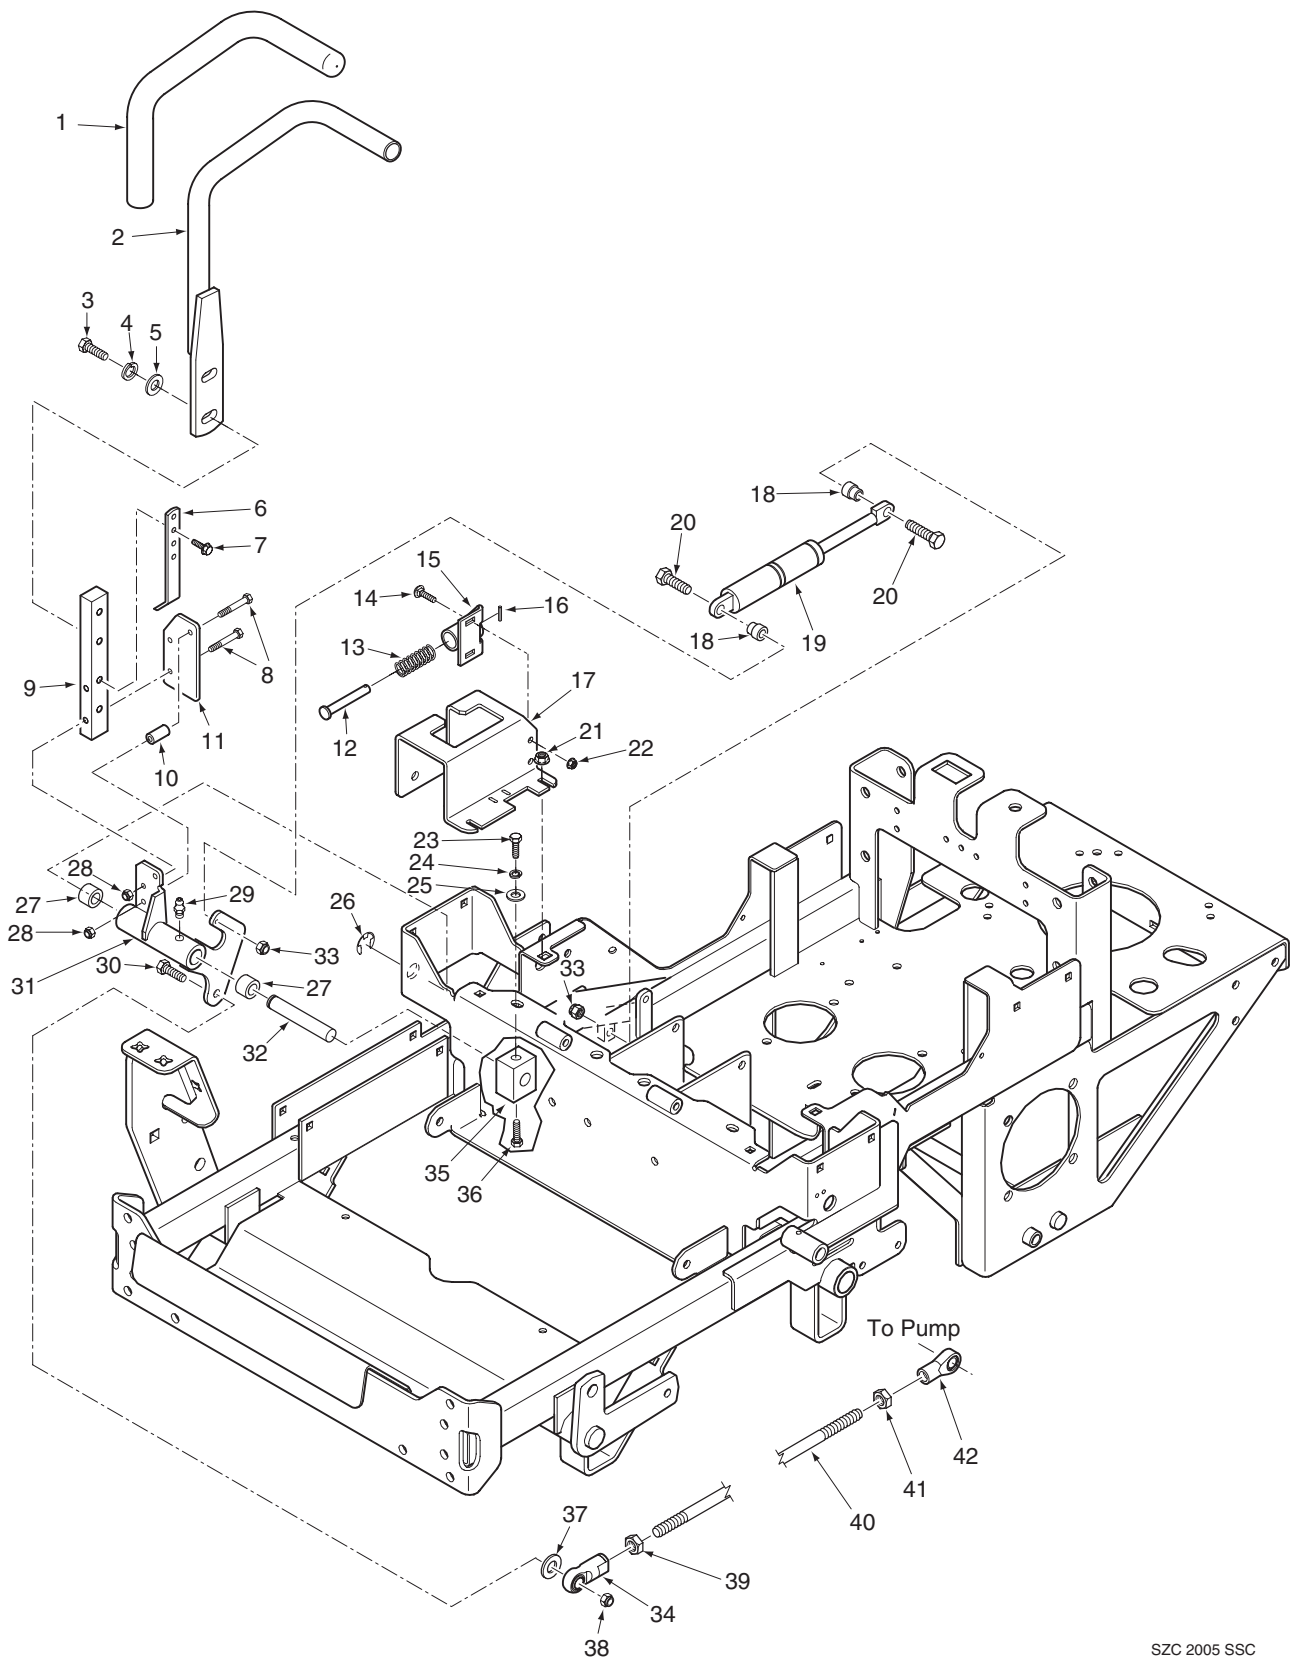

STEERING COMPONENTS

Ref. Part No. No.	Description
1 482340	Grip, Control Lever
2 461386	Handle Bar (Includes item 1)
3 04001-32	Bolt, Hex Head 3/8-16 x 1-1/4"
4 04030-04	Lock Washer, 3/8"
5 04041-07	Flatwasher, 3/8-.391 x .938 x .105
6 423057	Bracket, Switch Actuator
7 04017-16	Bolt, Hex Serr. Flange 5/16-18 x 3/4"
8 04001-17	Bolt, Hex Head 5/16-18 x 2"
9 422372	Bar, Control Lever
10 43559	Spacer, Control
11 423599	Plate, Control Lever
12 43477	Pin Retainer
13 481389	Spring
14 04003-02	Bolt, Carr. 1/4-20 x 3/4"
15 45918	Bracket, Control Return
16 04060-01	Roll Pin, Spring 5/32 x 3/4"
17 461770	Control Bracket with Decal, L.H.
461771	Control Bracket with Decal, R.H.
18 43602	Spacer, Pump Dampener
19 482452	Gas Damper
20 04001-12	Bolt, Hex Head 5/16-18 x 1-3/4"
21 04019-03	Nut, Serr., Flange, 5/16-18
22 04021-08	Nut, Elastic Stop 1/4-20
23 04001-18	Bolt, Hex Head 3/8-16 x 3/4"
24 04030-04	Lock Washer, 3/8"
25 04041-07	Flatwasher, 3/8-.391 x .938 x .105
26 04050-02	Retaining Ring, 3/4" Ext.
27 48100-06	Bushing, .753 ID
28 04021-10	Nut, Elastic Stop 5/16-18
29 48114-04	Grease Fitting, 1/4-28 Self Tap
30 04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
31 49921	Linkage Bellcrank Assembly R.H.(Incl. Items 27, 29)
49920	Linkage Bellcrank Assembly L.H.(Incl. Items 27, 29)
32 43616	Shaft, Steering Control
33 04021-10	Nut, Elastic Stop 5/16-18
34 482330	Rod End, 3/8-24 RH Female
35 482099	Block, Clamping
36 04001-19	Bolt, Hex Head 3/8-16 x 1"
37 04041-07	Flatwasher, 3/8-.391 x .938 x .105
38 04021-09	Nut, Elastic Stop 3/8-16
39 04020-14	Nut, 3/8-24 RH Thread
40 483133	Link, Pump 3/8-24 x 10.89"
41 04020-17	Nut, 3/8-24 UNF-2B LH Thread
42 482331	Rod End, 3/8-24 LH Thread


BRAKE COMPONENTS

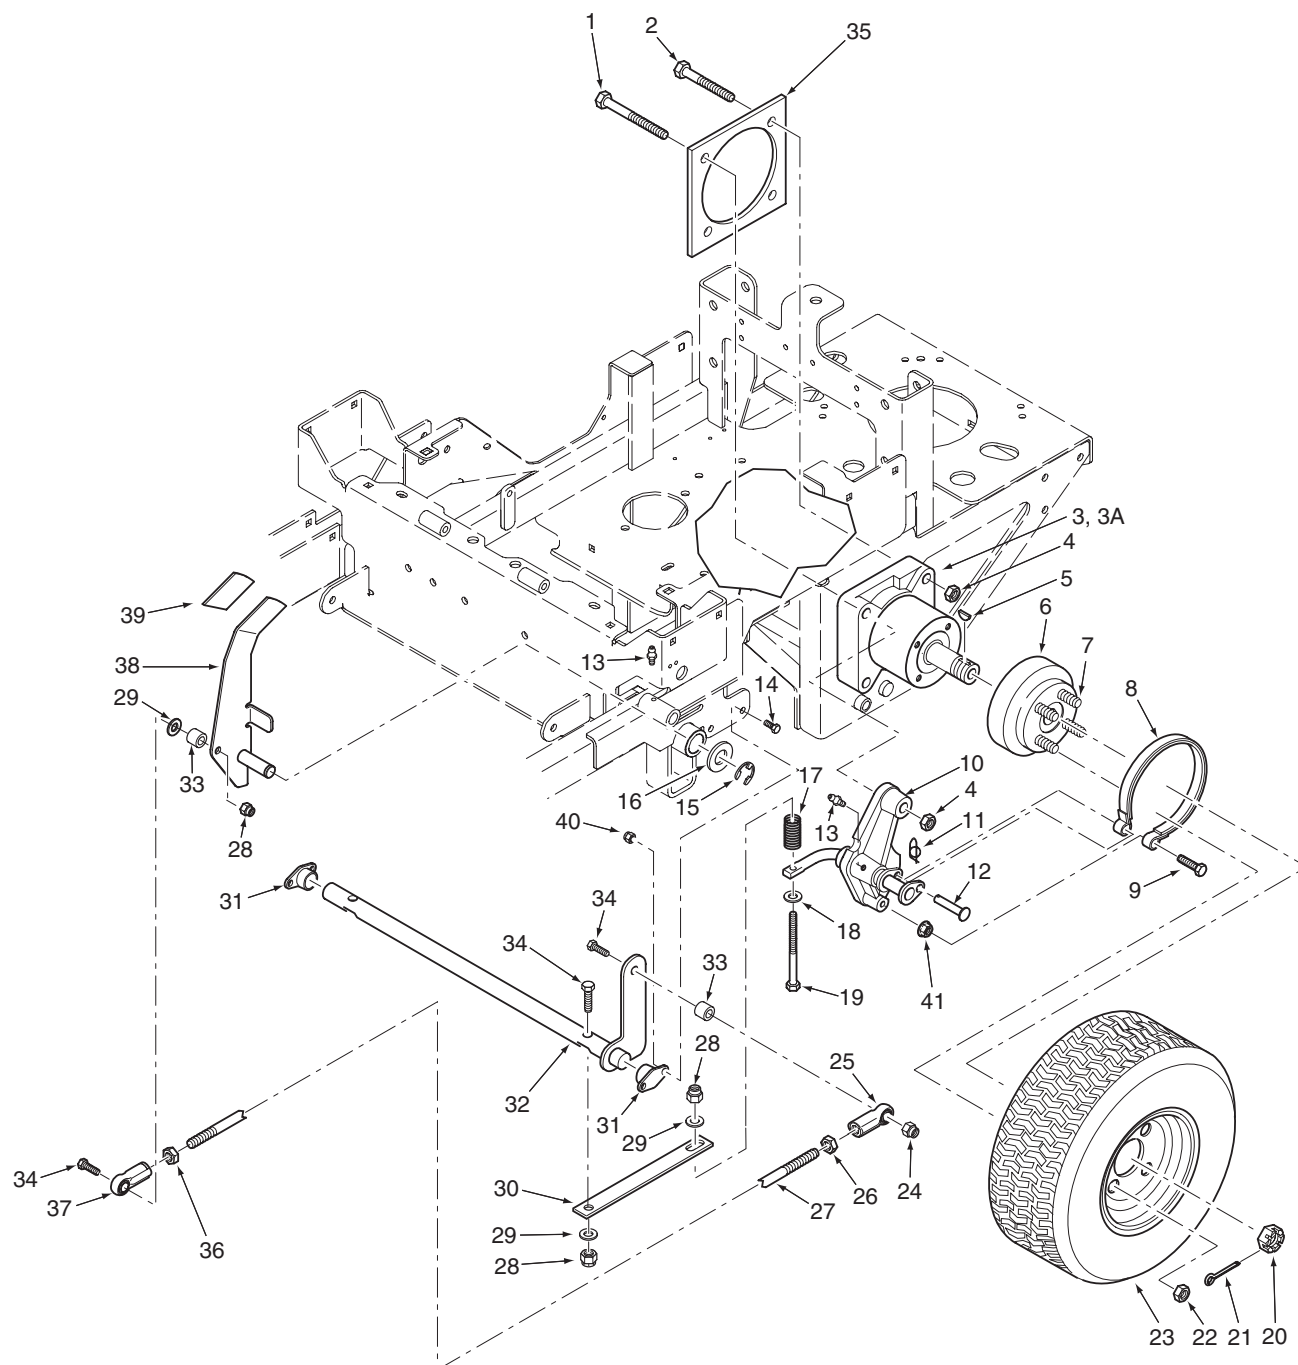

BRAKE COMPONENTS

Ref. No.	Part No.	Description
1	04001-163	Bolt, Hex Head 1/2-13 x 3-3/4"
2	04001-52	Bolt, Hex Head 1/2-13 x 2-1/2"
3	483107	Wheel Motor, L.H. - Hydro-Gear
3A	483108	Wheel Motor, R.H. - Hydro-Gear
4	04021-19	Nut, 1/2-13 Center Lock
5	04063-25	Key, Woodruff 5/16 x 1"
6	461438	Wheel Hub Assembly
7	04008-01	Bolt, Serr. Flange 1/2-20 x 1.563"
8	481601	Brake Band Assembly
9	04001-31	Bolt, Hex Head 3/8-16 x 2-1/2"
10	451730	Brake Linkage Weldment, L.H. SZC
	451731	Brake Linkage Weldment, R.H. SZC
11	04069-01	Pin, Rue Cotter 3/8 Dia.
12	04064-16	Clevis Pin, 3/8 x 1.93"
13	48114-04	Grease Fitting, 1/4-28
14	04001-08	Bolt, Hex Head 5/16-18 x 3/4"
15	04050-01	Retaining Ring, .625 Ext.
16	04043-06	Flatwasher, 5/8-.688 x 1.75 x .134
17	483124	Spring, Brake
18	04043-04	Flatwasher, 3/8-.391 x .938 x .105 HD
19	04001-77	Bolt, Hex Head 3/8-16 x 3-1/2"
20	48680	Nut, Hex Castle 1.0-20 UNEF
21	04061-06	Cotter Pin, 9/64 x 1-1/2"
22	04028-02	Lug Nut, 1/2-20
23	482185	Wheel Assembly, 23 x 8.5-12 4 Ply (36")
	482186	Rim w/Valve Stem (36")
	481833	Tire, 23 x 8.5-12 4 Ply (36")
	482413	Wheel Assembly, 23 x 9.5-12 4 Ply (42")
	482414	Rim w/Valve Stem (42")
	482194	Tire, 23 x 9.5-12 4 Ply (42")
24	04021-09	Nut, Elastic Stop 3/8-16
25	483128	Rod End, 3/8-24 R.H. Female
26	04020-25	Nut, 3/8-24 UNF Jam
27	483129	Link, Brake 3/8-24 x 8-5/8"
28	04021-09	Nut, Elastic Stop 3/8-16
29	04043-04	Flatwasher 3/8-.391 x .938 x .105 HD
30	483111	Spring, Flat Brake
31	482061	Bushing, Self Align
32	451733	Brake Shaft Weldment, SZC
33	43063	Spacer
34	04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
35	423279	Plate Weldment, Motor Backing
36	04020-26	Nut, 3/8-24 UNF L.H. Jam
37	483127	Rod End, 3/8-24 L.H. Female
38	461509	Brake Lever (includes item 39)
39	482102	Grip, Brake Lever
40	04021-10	Nut, Elastic Stop 5/16-18
41	04019-04	Nut, Serr. Flange 3/8-16

FUEL AND HYDRAULIC SYSTEM

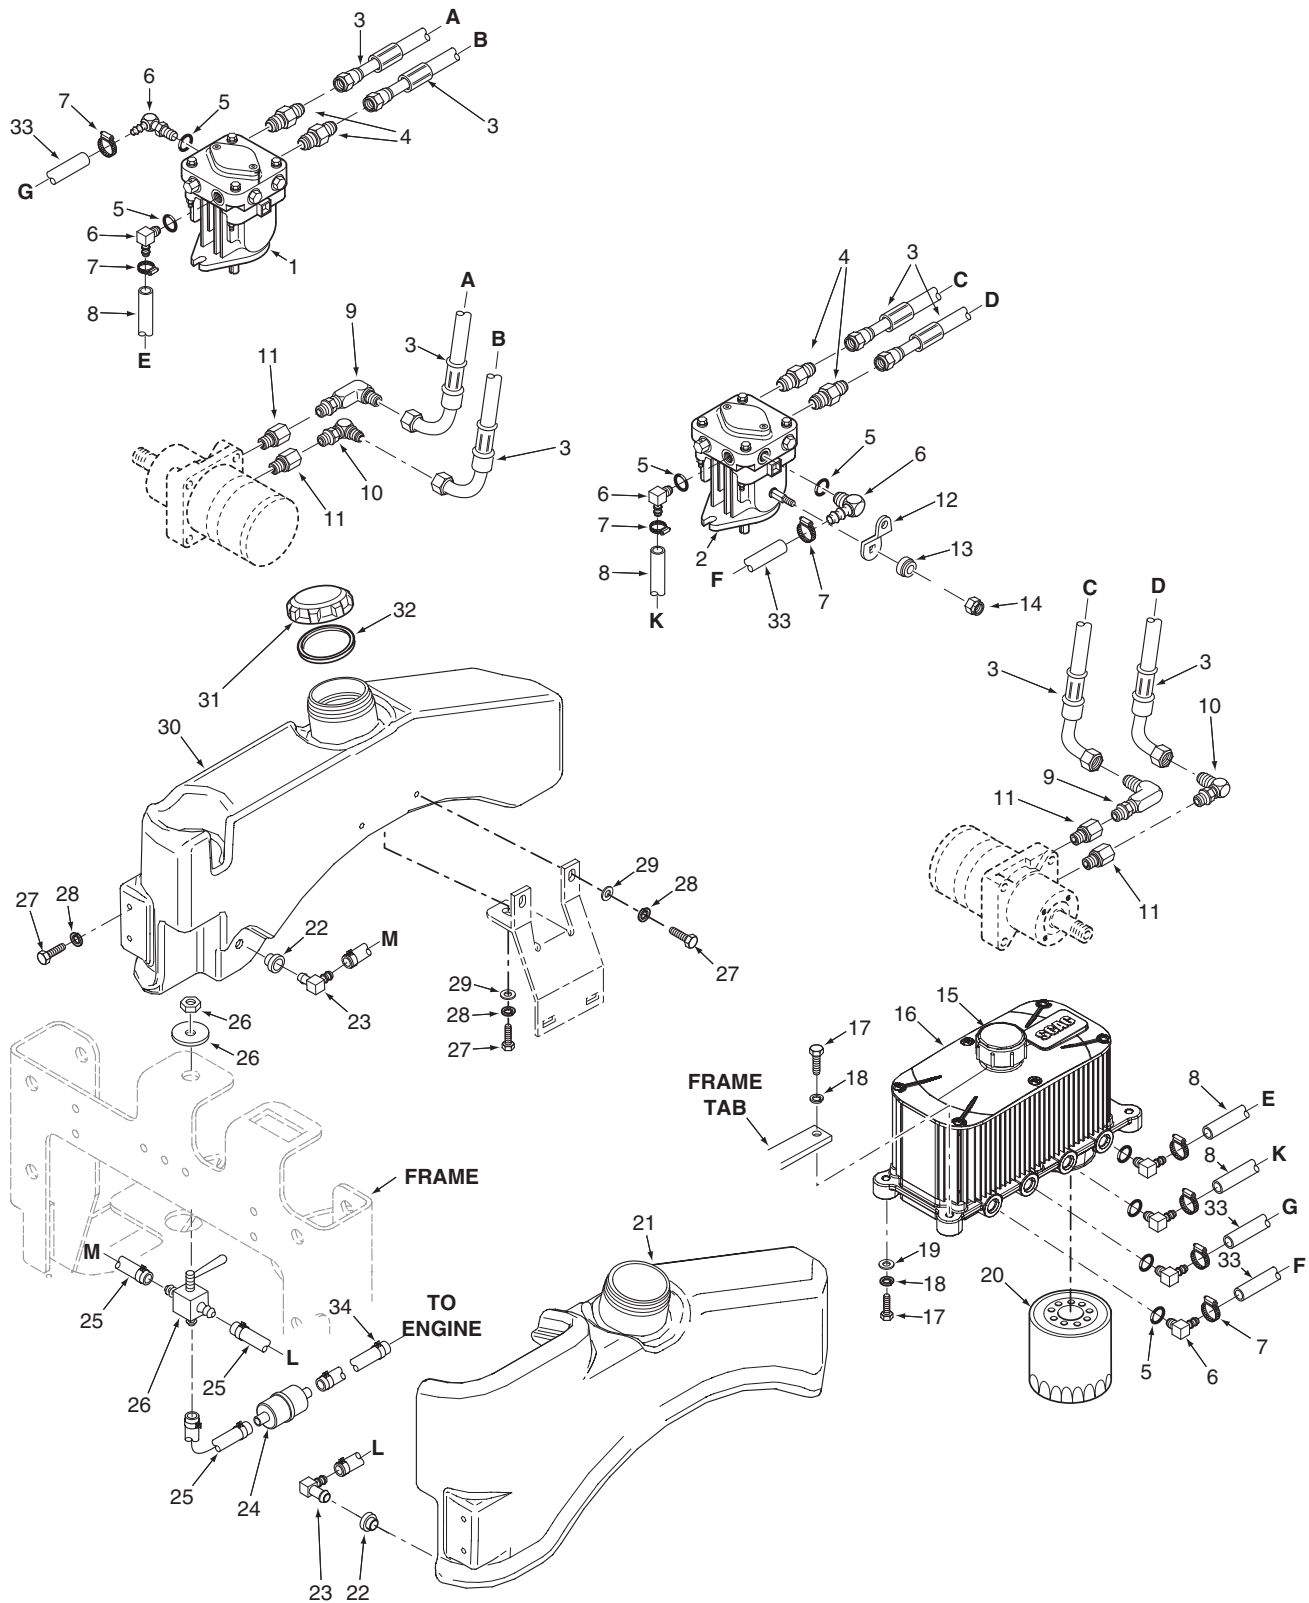


FUEL AND HYDRAULIC SYSTEM

Ref. Part No. No.	Description	Ref. Part No. No.	Description
1 483106	Pump, R.H. BDP-10A (PG-1GCC-D11X-XXXX)	18 04030-03	Lockwasher, 5/16" Spring
2 483105	Pump, L.H. BDP-10A (PG-1JCC-D11X-XXXX)	19 04040-15	Flatwasher, 5/16-.375 x .875 x .083
3 482994	Hose Assembly, Wheel Motor SZC	20 48462-01	Filter, Spin On
4 48572-04	Fitting, 1/2" JIC x 1/2" O-Ring	21 461828	Fuel Tank, L.H. SZC
5 48603-06	O-Ring	22 48309	Tank Bushing
6 482266-01	Elbow, 90 Degree O-Ring 9/16-18 x 3/8 Hose	23 48939	Elbow, 90 Degree
7 48136-13	Clamp, Hose .69 Max Dia.	24 **	Fuel Filter
8 48811	Hose, 3/8" Pushlock (order by inch)	25 48058	Fuel Hose, 1/4 ID
9 481761-01	Elbow, 90 Degree JIC to O-Ring	26 482212	Valve, Fuel Shutoff
10 48350-02	Elbow, 90 Degree 1/2 x 1/2" JIC to O-Ring	27 04001-08	Bolt, Hex Head 5/16-18 x 3/4"
11 48938-02	O-Ring Bushing, 5/8"	28 04030-03	Lockwasher, 5/16
12 424061	Control Lever, Pump	29 04040-15	Flatwasher, 5/16-.375 x .875 x .083
13 483123	Retainer, Pump Lever	30 461829	Fuel Tank, R.H. SZC
14 04021-12	Nut, Center Lock 5/16-24	31 482547	Cap, Fuel Tank (incl. item #32)
15 483094	Cap, Oil Reservoir	32 482774	Gasket, Gas Tank Cap
16 461752	Oil Reservoir (incl. items 6, 15, 20)	33 483146	Hose, 3/8" Pushlock Gray (order by inch)
17 04001-09	Bolt, Hex Head 5/16-18 x 1"	34 48059-01	Clamp, Fuel Hose 1/4 Hose ID

** Available through the individual engine manufacturer.


ELECTRICAL SYSTEM

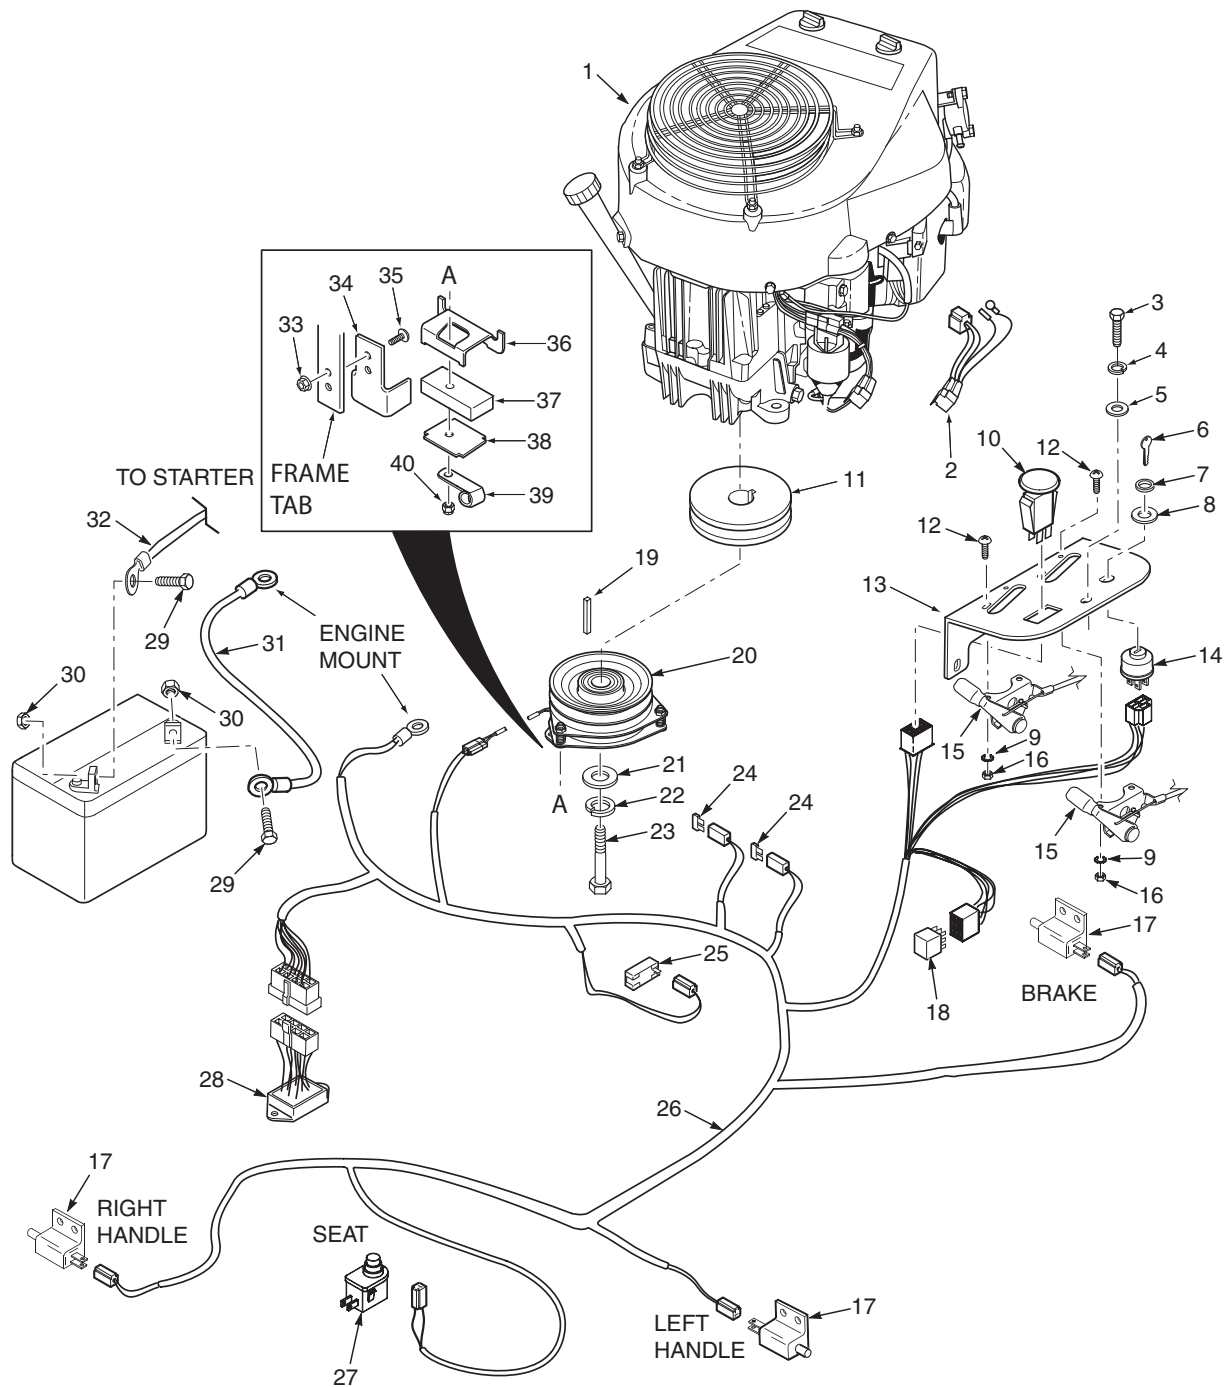

ELECTRICAL SYSTEM

Ref. No.	Part No.	Description
1	482931	Engine, Kawasaki 17hp (FH541V-AS36)
	483024	Engine, Kawasaki 19hp (FH580V-AS33)
2	483103	Wire Harness Adapter, SZC KA
3	04001-08	Bolt, Hex Head 5/16-18 x 3/4"
4	04030-03	Lockwasher, 5/16
5	04040-15	Flatwasher, 5/16-.375 x .875 x .083
6	48017-02	Key, Ignition
7	48017-04	Nut, Hex 5/8-32
8	48017-03	Lockwasher, 5/8" Internal
9	04031-01	Lock Washer, #10 External Tooth
10	483162	Switch, PTO
11	482968	Pulley, 5.45" Dia. 1" Bore
12	04010-12	Screw, #10-32 x 3/4"
13	461836	Instrument Panel
14	48798	Switch, Ignition
15	483168	Control Cable
16	04020-01	Nut, Hex #10-32
17	481637	Switch, N/O
18	483013	Relay
19	04063-23	Key, 1/4 x 1/4 x 3-1/4"
20	461772	Clutch Assembly, GT2.5 - 1" Bore (incl. items 33, 34, 35, 36, 37, 38, 39, 40)
21	04041-28	Flatwasher, 7/16-.469 x 1.75 x .25
22	04030-05	Lockwasher, 7/16 Spring
23	04102-04	Bolt, Hex Head 7/16-20 x 2-1/2" w/Patch
24	48298	Fuse, 20 amp
25	483072	Hourmeter
26	483020	Wire Harness, SZC
27	481638	Switch, Seat
28	483029	Electric Module
29	04001-44	Bolt, Hex Head 1/4-20 x .5"
30	04020-02	Nut, Hex 1/4-20
31	48029-15	Battery Cable, Negative Black
32	48029-12	Battery Cable, Positive Red
33	04021-10	Nut, Elastic Stop 5/16-18
34	421370	Plate, Clutch Anti-Rotation
35	04003-04	Bolt, Carriage 5/16-18 x 1"
36	422533	Retainer, Clutch
37	481716	Rubber Pad, Clutch Stop
38	422534	Plate, Backing
39	48030-09	Clamp, Cable 1/2" ID
40	04021-10	Nut, Elastic Stop 5/16-18

HYDRAULIC PUMP ASSEMBLY

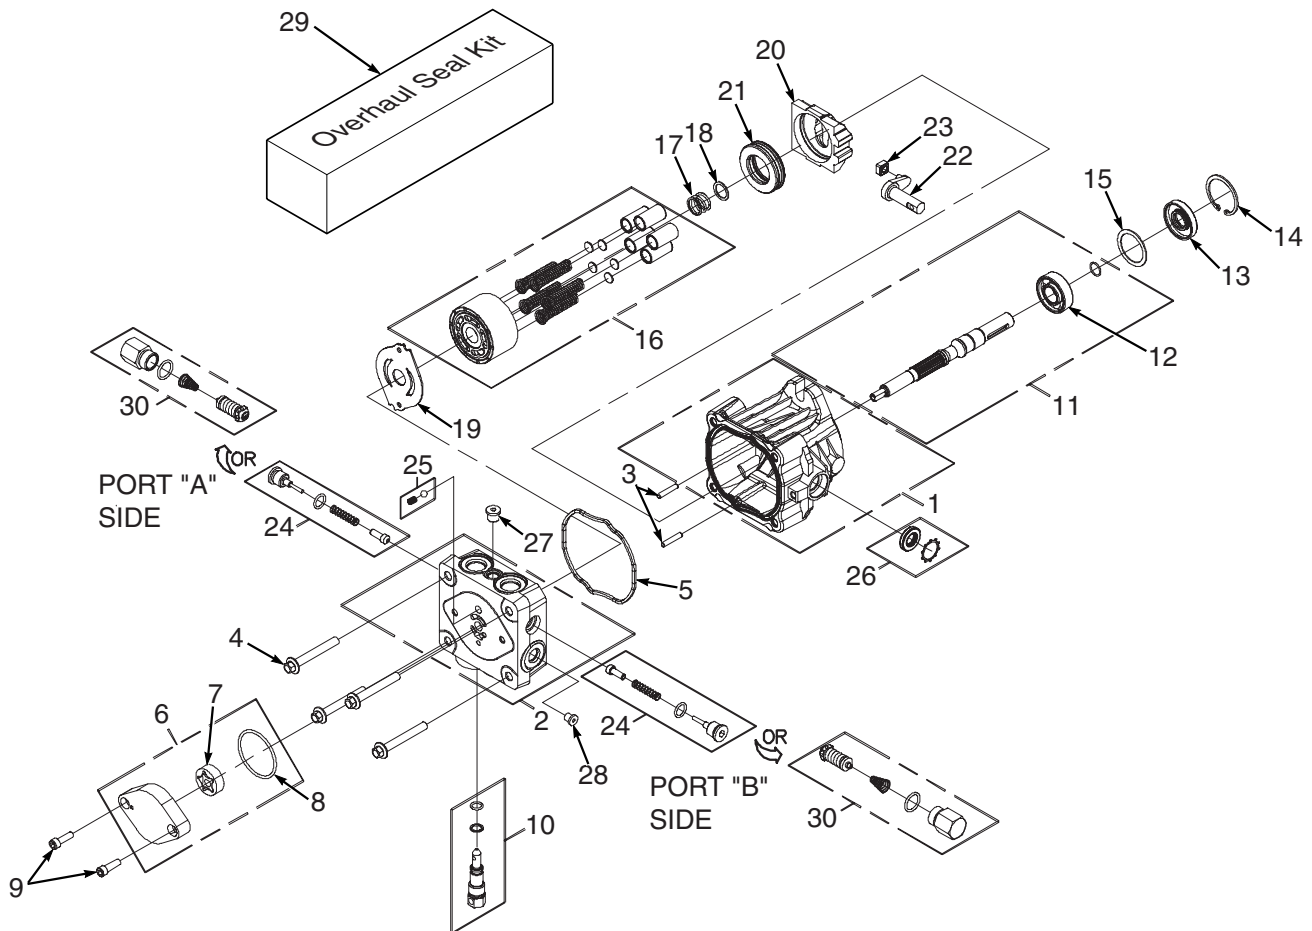


HYDRAULIC PUMP ASSEMBLY

Ref. No.	Part No.	Description
1	HG 70516	Housing Kit
2	HG 70573	End Cap Kit
3	HG 50641	Straight Headless Pin
4	HG 50969	Hex Flange Bolt, M8-1.25 x 60mm
5	HG 51232	Housing O-Ring
6	HG 2513027	Charge Pump Kit
7	HG 50273	Gerotor Assembly
8	HG 9004101-1340	O-Ring
9	HG 50095	Socket Head Screw, M6 x 1.0-20mm
10	HG 2513030	Bypass Valve Kit
11	HG 70521	Pumpshaft Kit
12	HG 50315	Ball Bearing, 17 x 40 x 12
13	HG 51161	Lip Seal
14	HG 50329	Retaining Ring
15	HG 50951	Spacer
16	HG 70331	Cylinder Block Kit
17	HG 2003014	Block Spring
18	HG 2003017	Block Thrust Washer
19	HG 51444	Valve Plate
20	HG 2003087	Swash Plate
21	HG 50551	Ball Thrust Bearing
22	HG 50807	Trunnion Arm
23	HG 2000015	Slot Guide
24	HG 2510062	Check Valve Kit (.024" Orifice) port "A" on Left Hand Pump, port "B" on Right Hand Pump
25	HG 70403	Charge Relief Kit
26	HG 2513043	Trunnion Seal with Retainer
27	HG 9005110-4400	Straight Thread Plug
28	HG 9005110-3100	Straight Thread Plug
29	HG 70525	Overhaul Seal Kit
30	HG 70589	System Check Relief Kit, port "B" on Left Hand Pump, port "A" on Right Hand Pump

REPLACEMENT DECALS AND INFORMATION PLATES



1

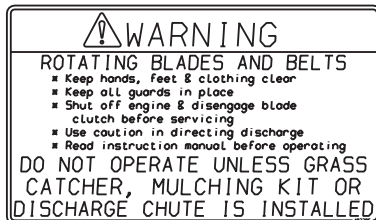


2



8



6

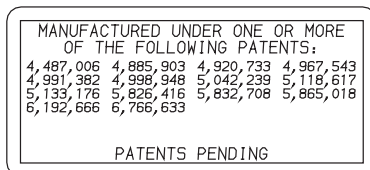


5



13




7

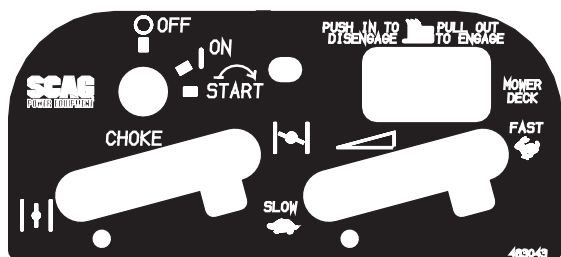

10




9

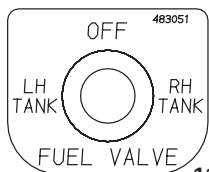


11



12

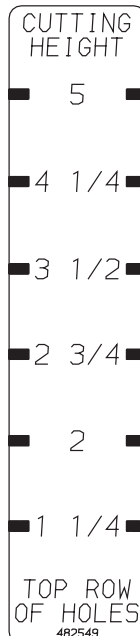

18

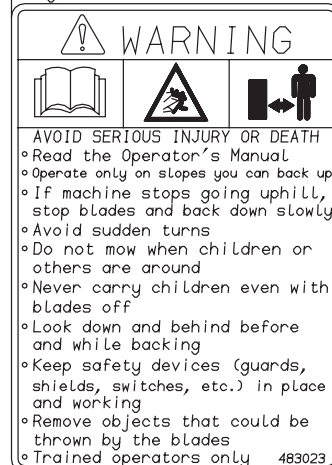

4

REPLACEMENT DECALS AND INFORMATION PLATES


Ref. No.	Part No.	Description
1	482285	Decal, Danger-Spinning Blades
2	482286	Decal, Warning-Rotating Blades
3	483059	Decal, 36 Advantage
	483060	Decal, 42 Advantage
4	483023	Decal, Fuel Tank Start/Drive
5	483044	Decal, Patents
6	482100	Decal, Traction Control
7	481971	Decal, Heavy Duty Commercial
8	48404	Decal, Metalcraft - Made in USA
9	481039	Decal, Belt Cover
10	483163	Decal, Instrument Panel
11	483051	Decal, Fuel Shutoff
12	482566	Decal, Cutting Height Bottom Row of Holes
13	483026	Decal, Front SZC
14	483061	Decal, Seat Support
15	483027	Decal, Rear SZC
16	482166	Decal, Front Footplate
17	482165	Decal, Discharge Chute
18	482549	Decal, Cutting Height Top Row of Holes

IMPORTANT ADJUSTMENT PROCEDURES

READ OPERATOR'S MANUAL FOR MORE DETAILS
Check tire pressure - (Drive tires-12 psi)
- (Caster tires-25 psi)

NEUTRAL ADJUSTMENT

 Loosen jam nuts



Rotate turnbuckle

With an operator in the seat, engine running, control lever in neutral and the parking brake disengaged - adjust control linkage. Loosen jam nuts. If wheel rotates forward, adjust turnbuckle CW. If wheel rotates rearward, adjust turnbuckle CCW. Adjust until drive wheel stops turning. Tighten jam nuts. Repeat procedure until proper Neutral Adjustment is obtained.

TRACKING ADJUSTMENT

If the machine pulls to the right, adjust LH control linkage CW to slow left wheel. If the machine pulls to the left adjust RH control linkage CW to slow right wheel. Readjust neutral if necessary.

FREE WHEEL OPERATION

To move machine without running the engine, rotate both dump valves located at the LH side of the pumps CCW 1/2 turn to "freewheel" positions. Return dump valves to original position to operate the mower. Tighten to 7-10 Ft-Lbs.

HYDRAULIC FLUID LEVEL

Check hydraulic fluid level while fluid is cool. Fluid level should be between add & full marks on the dipstick. Fill with SAE 20W50 motor oil only.

IMPORTANT

Do not overfill. Room for hot fluid expansion must be allowed or resulting expansion may cause leaks in the system.

483061

14

483027

15

483059

3

482166

16

WARNING

DO NOT OPERATE WITHOUT DISCHARGE CHUTE, MULCHING KIT, OR ENTIRE GRASS CATCHER INSTALLED

482165

17

SZC 2005 RDP2

ELECTRICAL SCHEMATIC - KAWASAKI

